

SMOKE ALARMS

SMOKE ALARM CONTROLLER



SMOKE ALARM CONTROLLER

The Emerald Smoke Alarm Controller provides an effortless method of testing, silencing and locating triggered smoke alarms without the need to reach up to the alarms on the ceiling.

The Smoke Alarm Controller will:

- Tests interconnected RF Smoke Alarms
- Locates and silences RF Smoke Alarms in the event of a false alarm.
- Provide a low battery warning
- No need for wiring. 10YR Lithium Battery powered.

The Emerald Smoke Alarm Controller works with RF models from the Ranger & Vulcan Emerald Alarms series. The controller does not work with other smoke alarm brands.

FEATURES

- 10-year 3V lithium battery
- RF interconnectable with up to 40 alarms on one wireless network
- Meets Australian smoke alarm standards (AS3786:2014)
- 7 year warranty



SPECIFICATIONS

| | |
|--|---------------|
| MODEL NUMBER | EP-SA-CONT-RF |
| NORMAL OPERATING & STORAGE TEMPERATURE | 0° to 40° |
| DIMENSIONS | 60mm x 15mm |
| WEIGHT | TBA |
| WARRANTY | 7 Years |

| | |
|-------------|--|
| TEST | Press the " test button " with red LED flashes once, all interlinked smoke alarms will beep for 15 seconds. |
| LOCATE | Press the " locate button " with red LED flashes once, silence all smoke alarms except the one sensing smoke/fire. |
| SILENCE | Press the " silence button " with red LED flashes once, all smoke alarms will be silenced. |
| ALARM | Red Fire indicator. When the smoke alarm alarming, the red LED will flash once a second. |
| LOW BATTERY | When the remote controller is in low battery mode, the yellow LED will flash once every 8 seconds. |